


Spiralite

Extended soffit panel

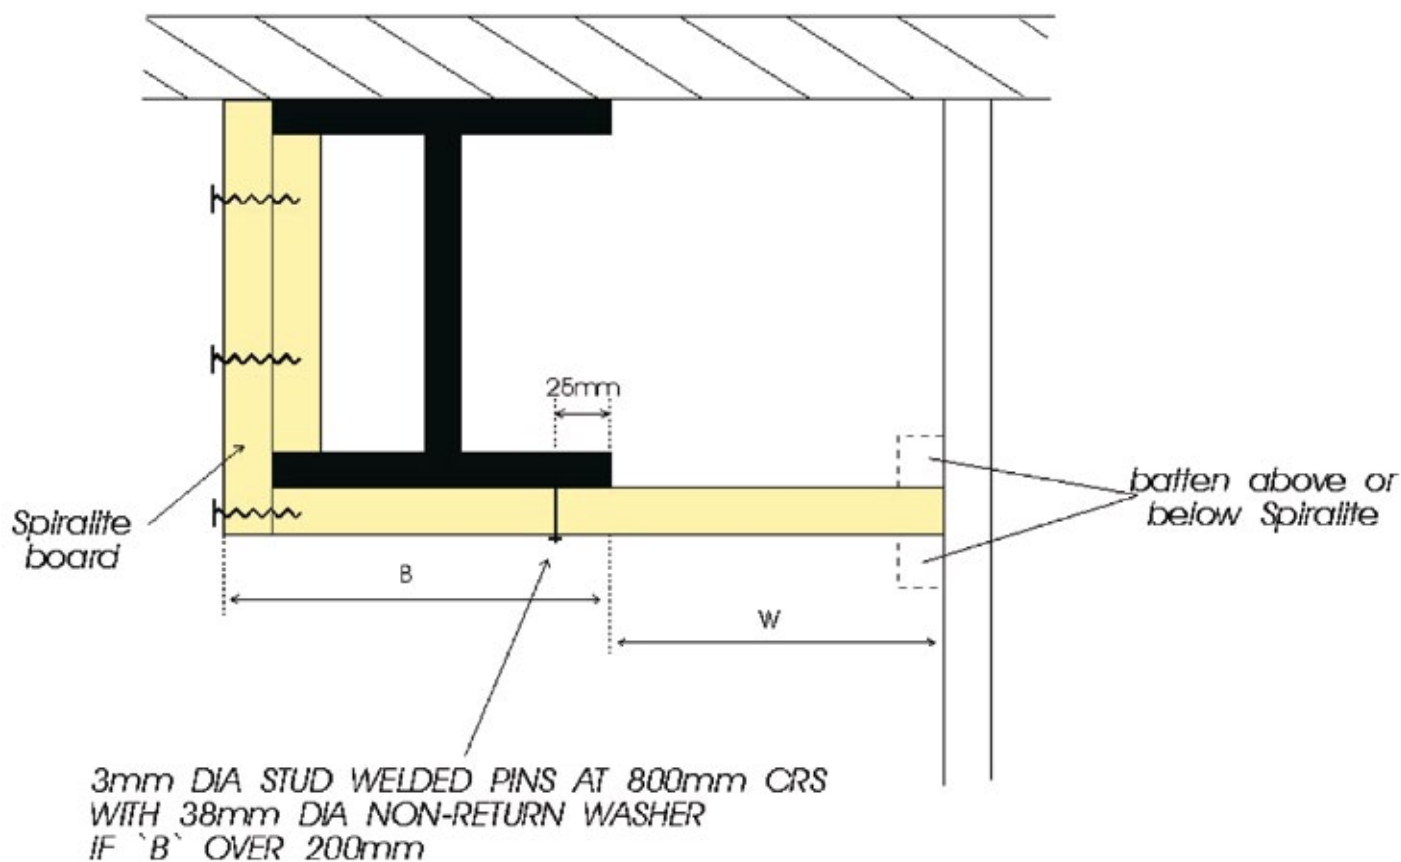

NOTES

1. Fix 50mm Spiralite batten (of thickness equal to protection thickness, with a minimum of 30mm) to wall either above or below soffit panel.
2. Secure soffit panel to batten using Spiralite screws at 150mm max centres.
3. If 'W' > 100mm replace Spiralite batten with 50mm x 50mm x 22swg angle.
4. If the breadth 'B' of the beam > 200mm, 3mm diameter stud welded pins at 800mm centres should be used.

The information contained in Cryotherm data sheets is believed correct at the time of publication. Whilst we will endeavour to keep our publications up to date, readers will appreciate that between publications there may be pertinent changes in the law, or other developments affecting the accuracy of the information provided.

Date of this revision: 24/06/15