



Rockliner

SHS 4 sided Snap Lock install

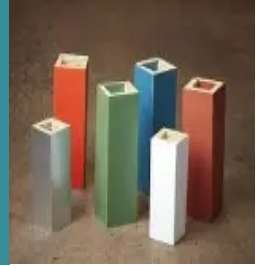

Step (1)
slide 3 sided casing
over SHS

Step (2) hold casing
over shs plumb, bring
lids to front face,

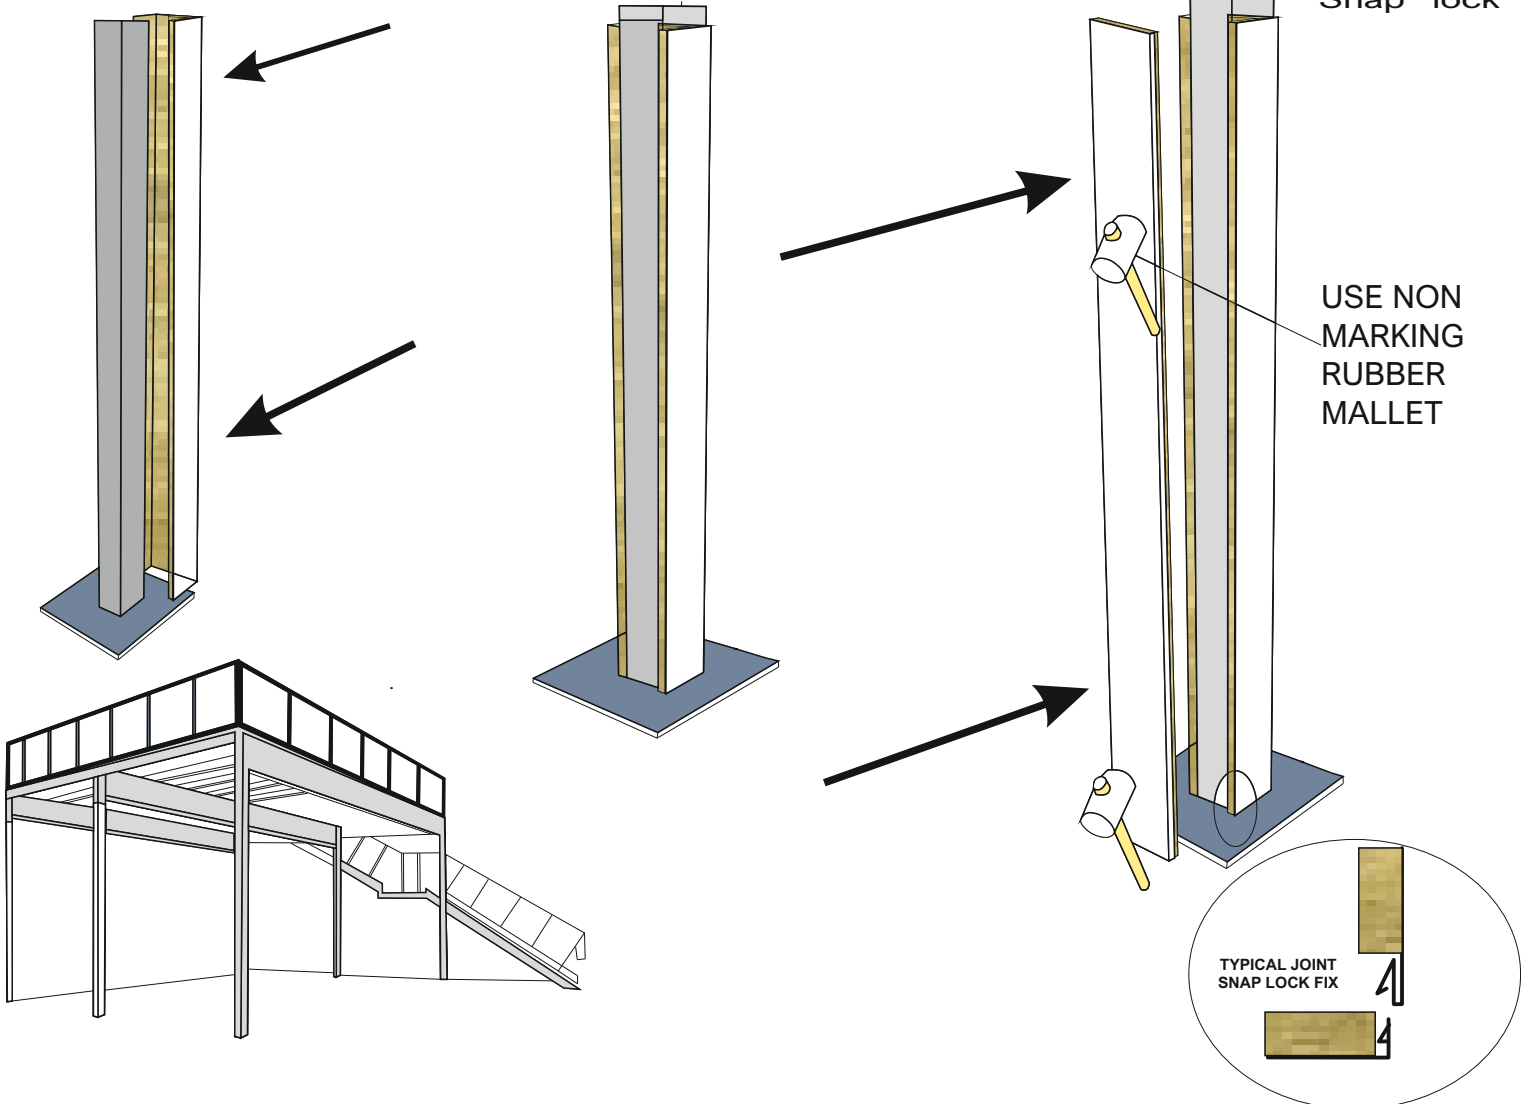

The information contained in Cryotherm data sheet is believed correct at the time of publication. Whilst we will endeavour to the keep our publications up to date., readers will appreciate that between publication there may be pertinent in the law, or other development affecting the accuracy of the information provided.

Date of this revision:01/01/2026

Cryotherm Insulation Ltd, Hirst Wood Road, Shipley, West Yorkshire, Bd18 4BU

Tel: 01274 589175 / Email: enquiries@cryotherm.co.uk / www.cryotherm.co.uk